



1.

The syphone and flexible of water will be on the floor

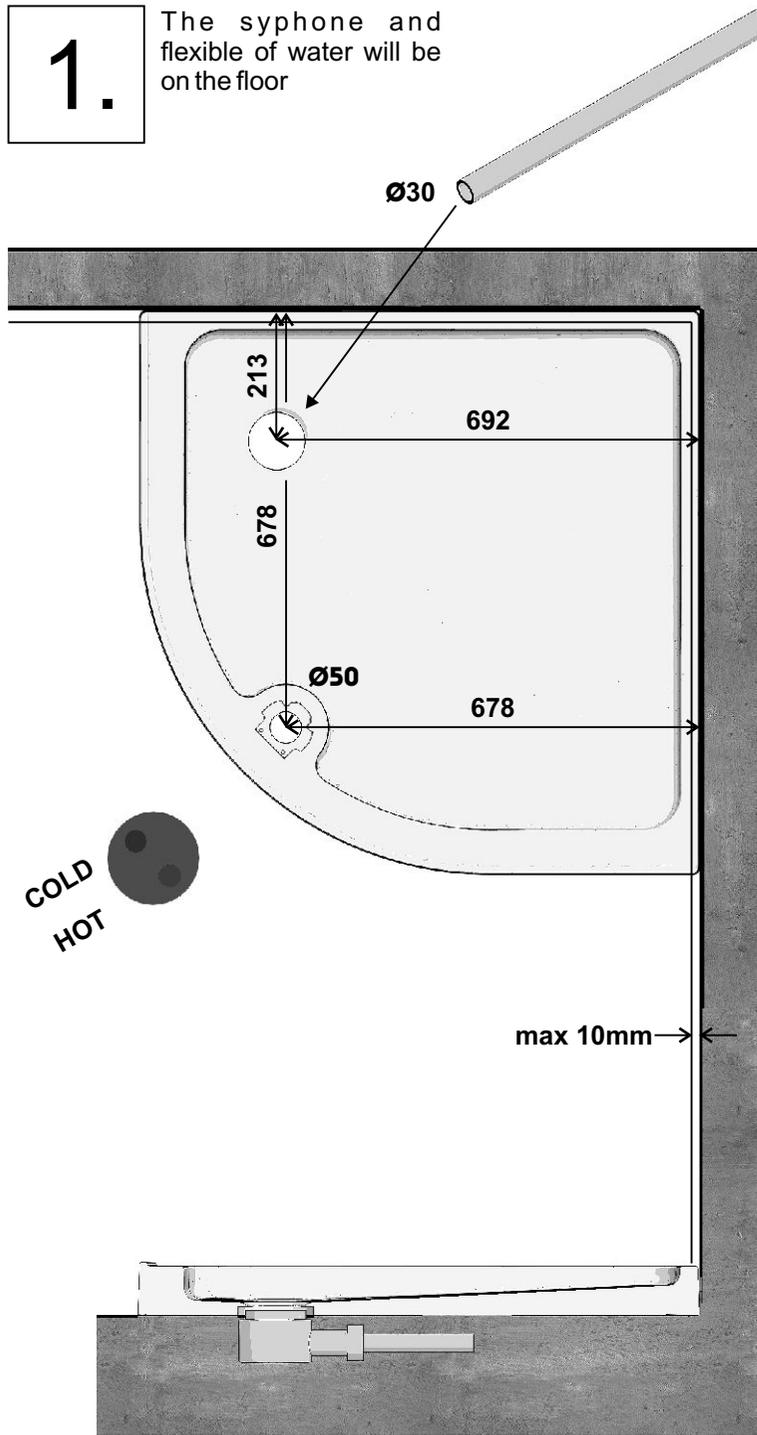


2.

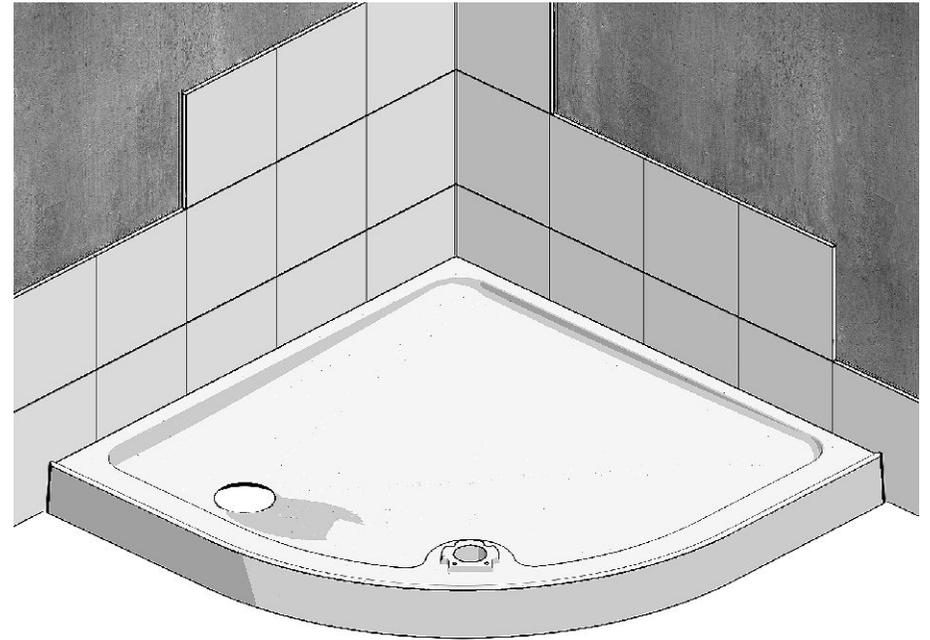



On picture 2 you have a tray external, in this case you can have the adjustment of 3mm.

On picture 3 you have the tray on tile maximum for 10 mm.



3.

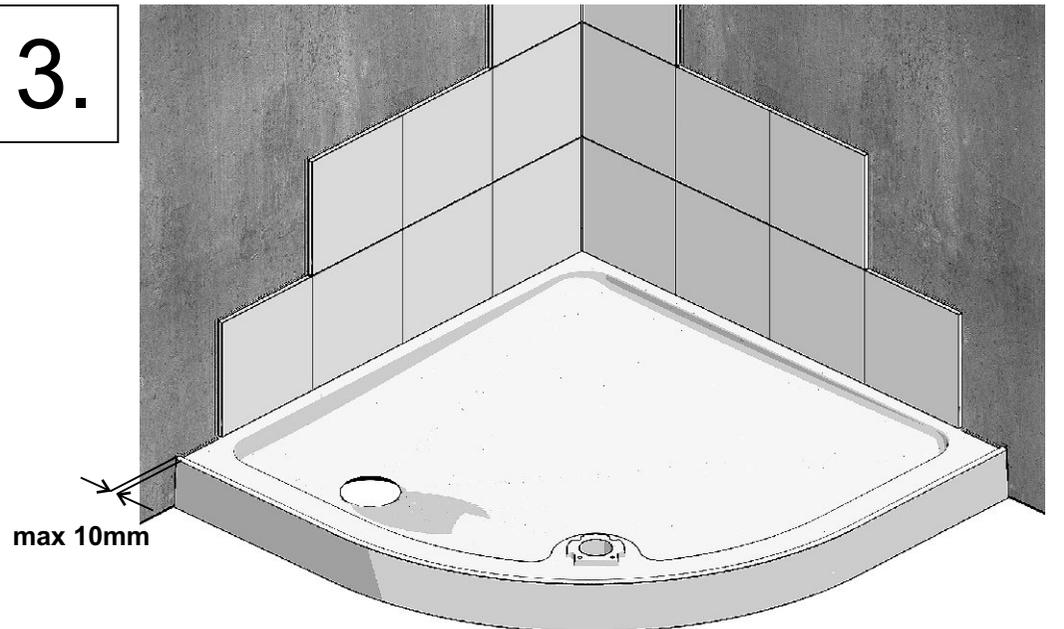


4.

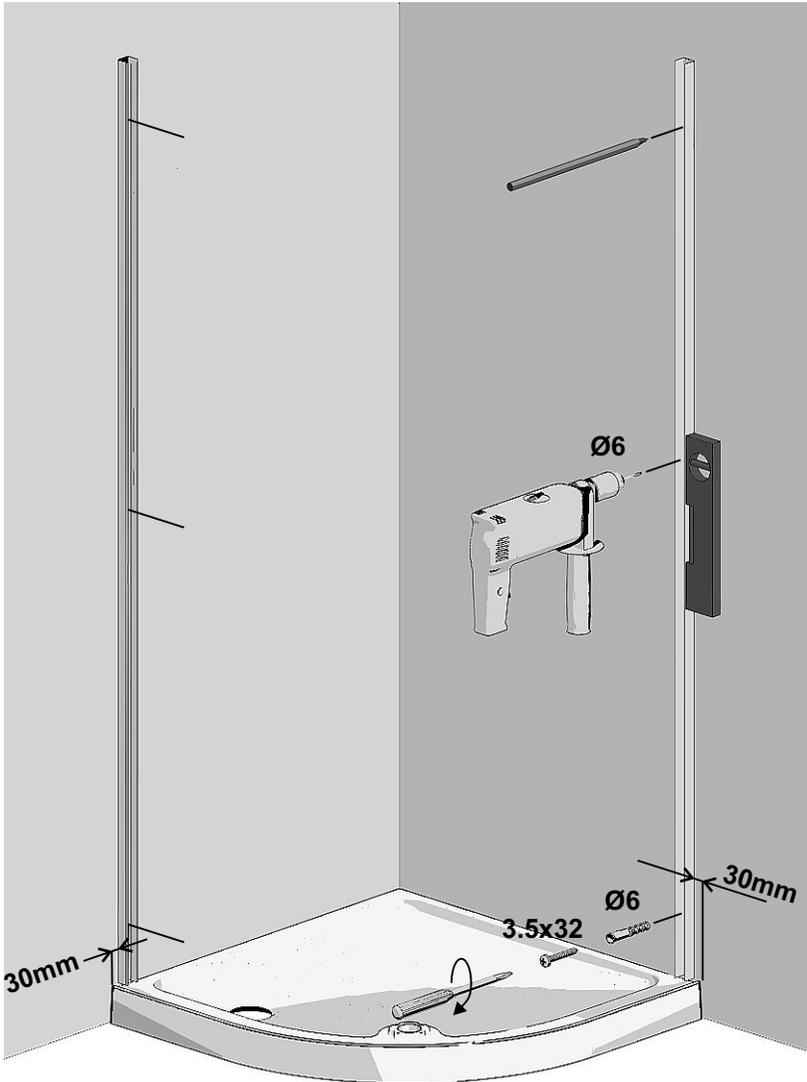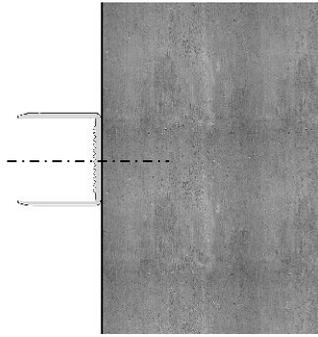

5.

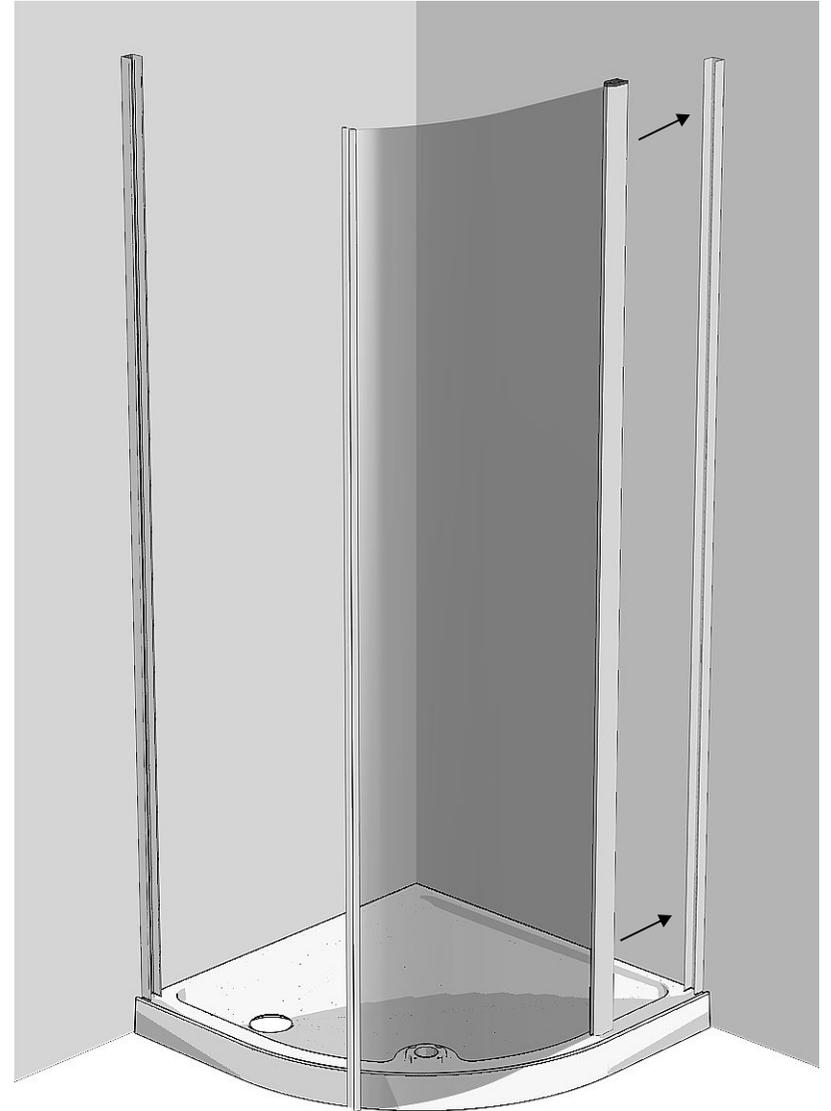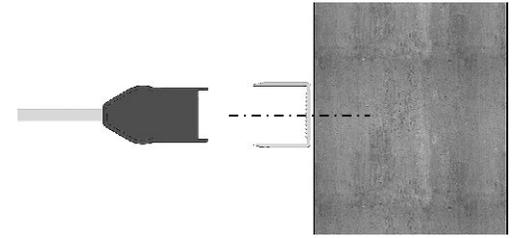


6.



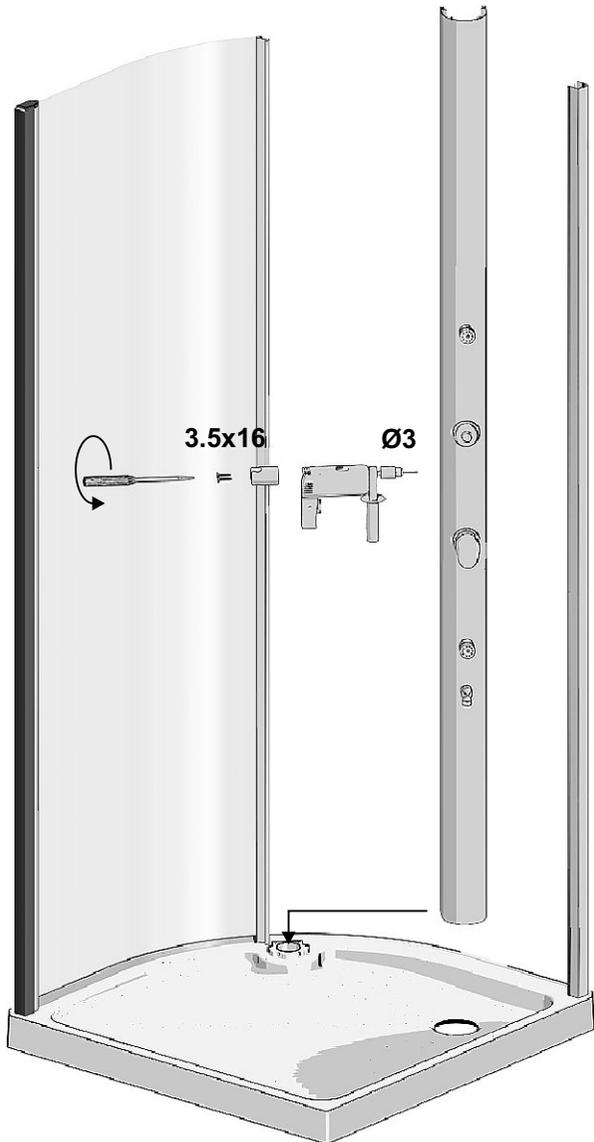


Attention:
on the moment that we put the shower hand we have take out the reversibility, we don't have think that when you change the left-right you find the shower Hand behind the door . We have think to do in the way that the shower remain reversible to put the exit of water in front the columns and give to chose where put (left or right) the support for shower hand to the customer . We will prepared the labels with the drawing of Holes to put on both side of columns and we supplied the tip of the bottoming drill in this way the cabin remain only one.


7.

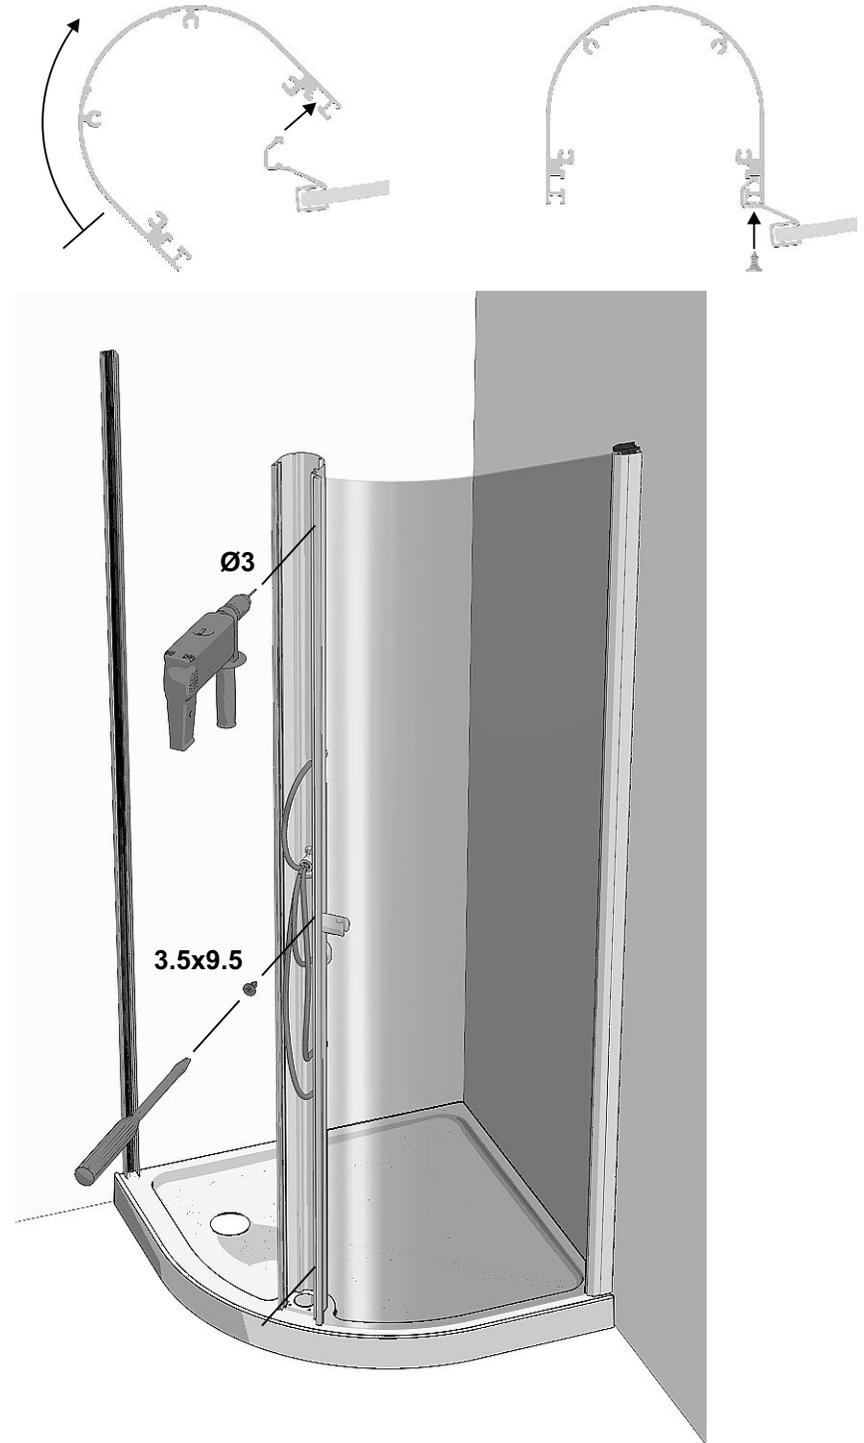


8.

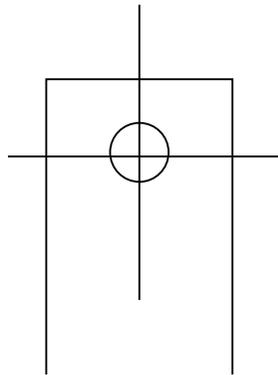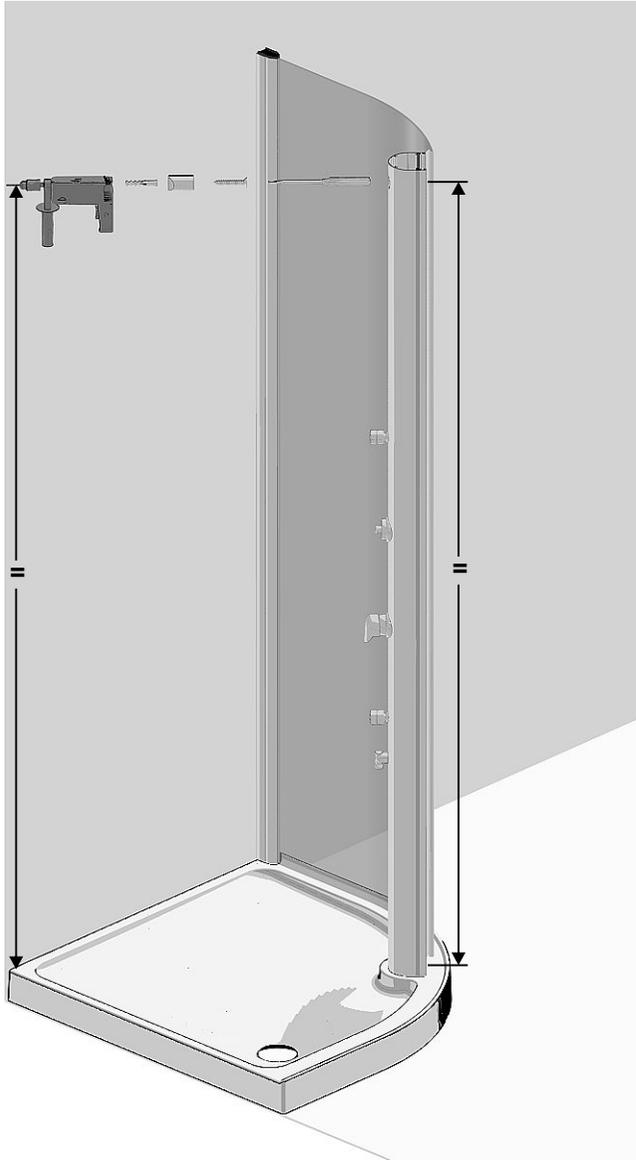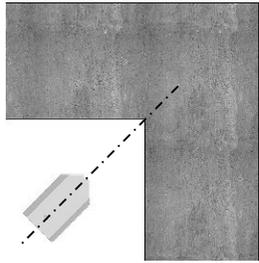


9.

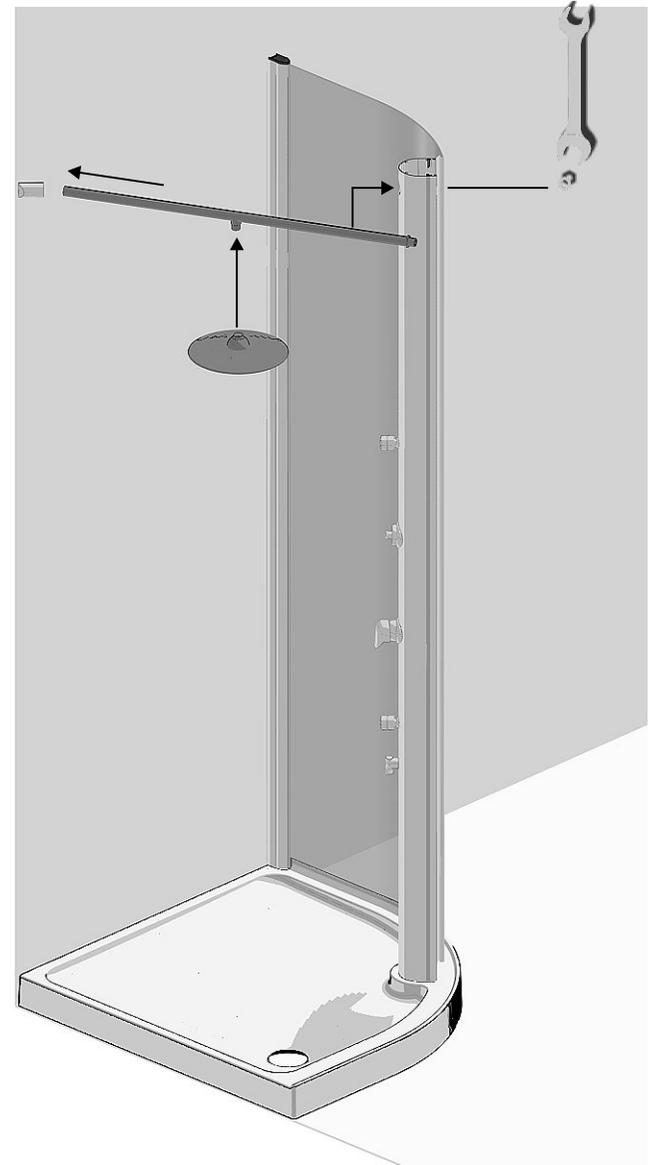


10.

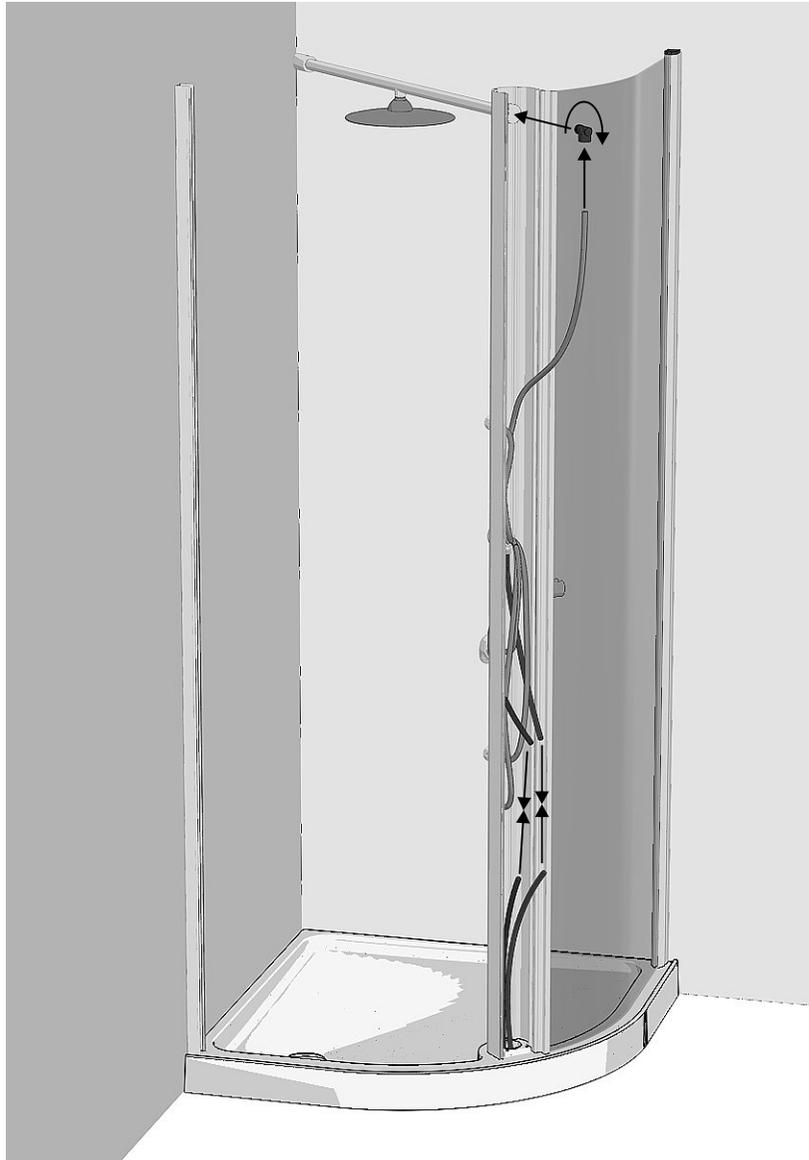


11.

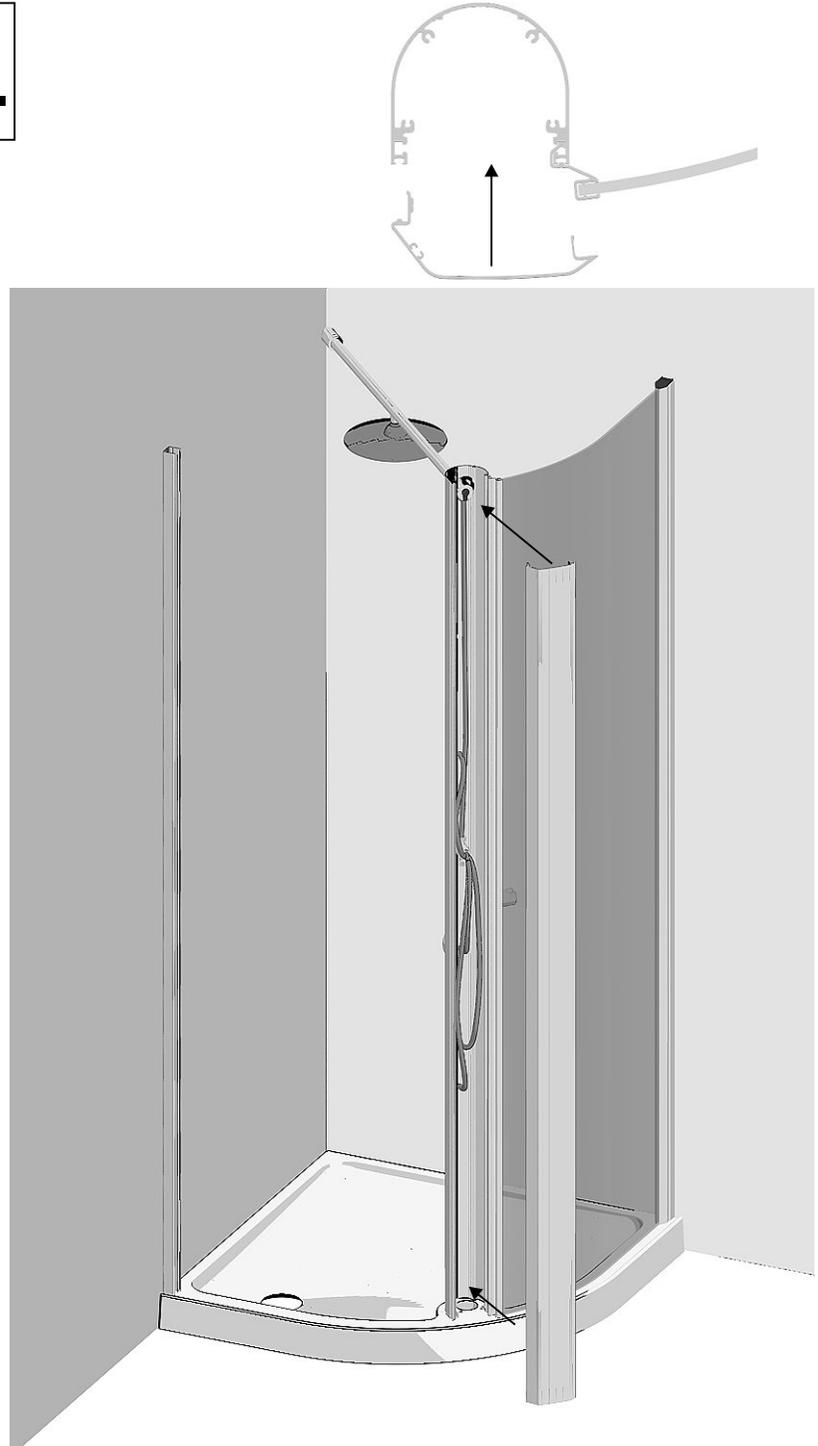


12.

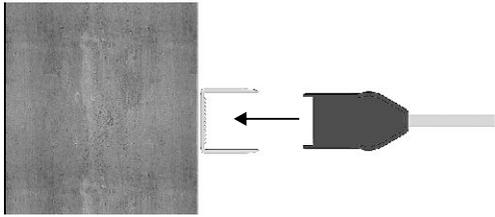

13.

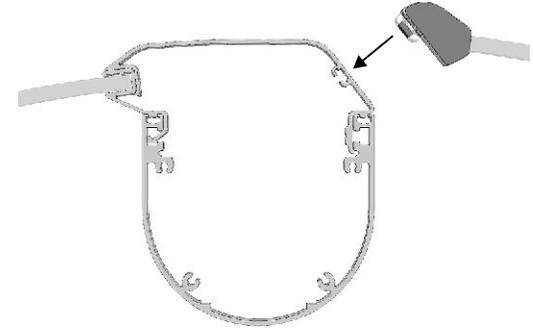

14.

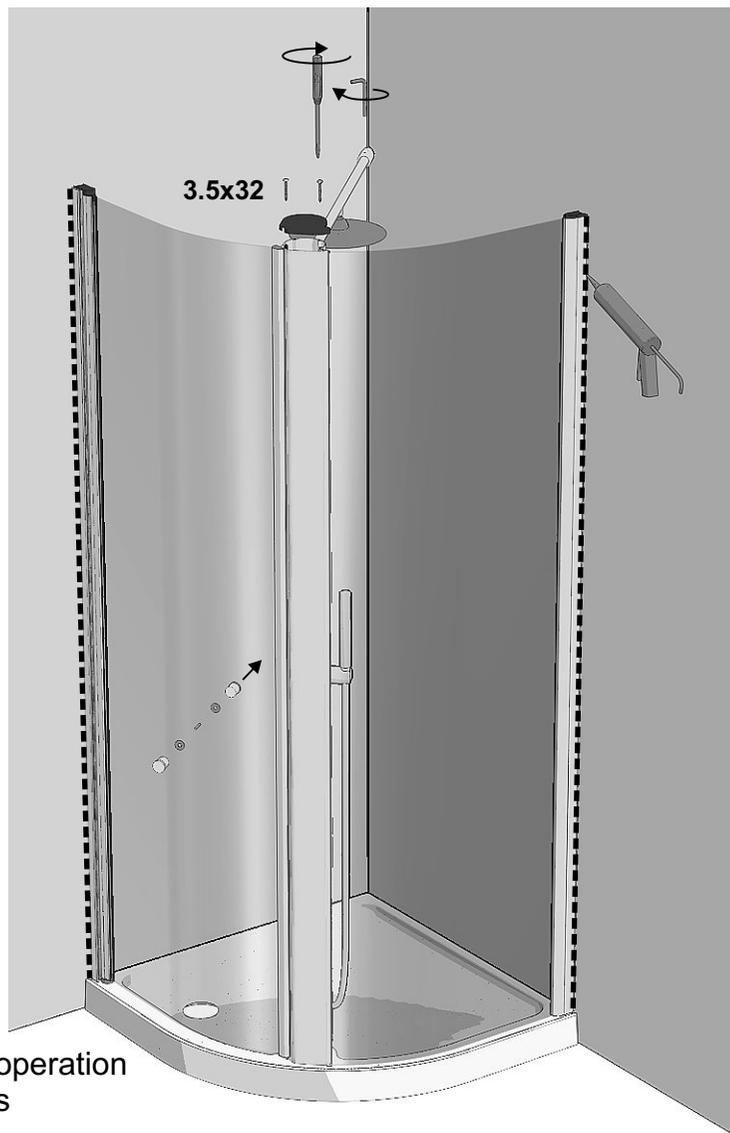

After silicon operation
wait 24 hours

Attention ! Clear the shower enclosure with clear water
or Alcohol don't use abrasive products or solvents.

